

CLIP FAN

COOL DADDY


by **TOUGH MAMA**®

CDCF-7" INSTRUCTION MANUAL



Note: Before use, please read this manual carefully.

PARTS NAME:

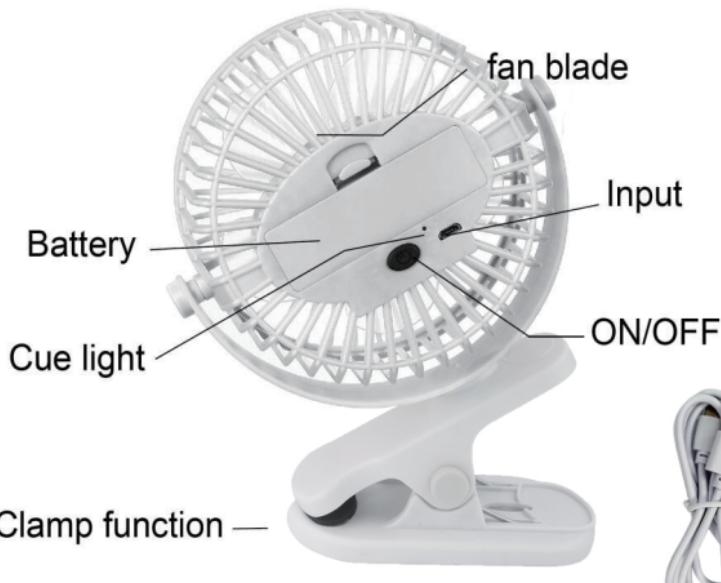

Usb cable

MAINTENANCE:

- When the product is not in use, please turn off the switch and cut off the power supply.
- Before cleaning and maintenance, disconnect the power supply to cool the product.

- When cleaning, dip a small amount of water with a rag or gently wipe the products surface with mild kitchen cleaner.
- It is strictly forbidden to use alcohol, gasoline and other solvents to clean, so as to avoid damages to the product.
- After cleaning, the product shall be dried and stored into the original packaging.
- The products has to be stored in a well-ventilated place with temperatures lower than 40°C and without corrosive gas around.

INSTRUCTIONS

Press once the switch behind the fan	Low Speed
Press twice the switch behind the fan	Medium Speed
Press the switch behind the fan tree times	High Speed
Press the switch behind the fan four times	Power Off
Hold the switch behind the fan	Light on

HOW TO CHARGE THE FAN

Plug the connected Usb Charging cable into the type C input socket of the fan. The red led is always on, indicating that the fan is charging. The indicator light turns off, indicating that the battery is fully charged.

WARNING

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the product out of reach of children.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use this product in damp environment, contact with water may cause product failure or damage.
- If the product gets accidentally damped with water or other liquids, immediately turn off the fan power switch and let it completely dry. When it will be completely dry it can be reused.

- Don't knock the product. It can be damaged.
- If the product is not used for a long time, it hasn't to be stored in an hot or humid place.
- Don't disassemble the product.
- Do not charge the product at a voltage different from the one required.
- Please unplug the cable when the product is fully charged.
- Do not touch or use the product with wet hands.
- Please use the produce at room temperature (0-40°C)
- If the product is not recharging please change the charging cable.
- If the product has abnormal high temperatures please stop recharging it immediately and contact after sales service.
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- Contact with other metals can cause heat, rupture and fire.
- Please take the used batteries to the recycle point or dispose of waste according to local regulations.
- Disassembly of battery components is not allowed.
- Please rinse with attention the skin if battery liquid get into contact with it.

- Charge the battery at room temperature. Never leave the equipment unattended during the charging process. Do not charge the battery near other sources of heat. Never cover the battery with clothes.
- The product contains rechargeable batteries. Do not throw the batteries into fire. Explosion risk!
- This appliance contains batteries that are only replaceable by skilled persons
- Ensure that the fan is switched off from the supply mains before removing the guard.

SPECIFICATIONS

NAMES	UNITS	DETAILS
Product name	CLIP FAN	Usb Fan
Model nr	CDCF-7"	HM0015/HM0016
Power	W	3W
Input	V	DC3.7V
Charging Time	H	2,5
Working Time	H	1,0-3,0
Battery capacity	mAh	800
Net Weight	g	250



INFORMATION FOR USERS OF DOMESTIC APPLIANCES

The above symbol indicates that the product has not to be disposed with other household waste throughout the Eu, To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it. You can return your used device buying a new one with similar characteristics, to the retail where you bought it. The retailers will waste the product according to the local dispositions.

*“Honor your father and mother so that you may live long
in the land the lord your god is giving you”
Exodus 20:12*

Cherenz Global Mfg. Inc., distributor of Tough Mama Home and Kitchen Appliances, shall not be responsible for any fire, scalding or injury from misuse or negligence from the use thereof.

COOL DADDY

by **TOUGH MAMA**®



DISTRIBUTED BY:
CHERENZ GLOBAL MANUFACTURING INC.

#79 Gen. Luis St. Ramitex Cmpd.

Bagbaguin, Valenzuela City

Tel. No.: 985-9902 / 441-8385