

# TOUGH MAMA®

## INSTRUCTION MANUAL

**45L Convection Oven, Rotisserie and Toaster**

**Model No.: NTMCRO-45**



**230V~ 60Hz 2000W**

**Please read all instructions before using this product.**

## IMPORTANT SAFETY INSTRUCTIONS

When using your *Toast Oven*, basic safety precautions should always be observed, including the following:

1. Do not touch hot surfaces. Always use handles or knobs.
2. Close supervision is necessary when any appliance is used by or near children.
3. To protect against electric shock, do not immerse cord, plug or any parts of the oven in water or any other liquids.
4. Do not let cord hang over edge of table or counter, or touch hot surfaces.
5. Do not operate appliance with damaged cord or plug or after the appliance malfunctions or has been damage in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
6. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.
7. Do not place on or near a hot gas or electric burner.
8. When operating the oven, keep at least four inches of free space on all sides of the oven to allow for adequate air circulation.
9. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
10. To disconnect, turn the time control to OFF, then remove the plug. Always hold the plug, and never pull the cord.
11. Extreme caution must be used when moving a drip pan containing hot oil or other hot liquids.
12. Do not cover crumb tray or any part of the oven with metal foil. This may cause the oven to overheat.
13. Use extreme caution when removing the tray, racks or disposing of hot grease or other hot liquids.
14. Do not clean the inside of the oven with metal scouring pads, pieces can break off the pad and touch electrical parts, creating a risk of electric shock.
15. Oversized foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric risk.
16. A fire may occur if the oven is covered or touching flammable material, including the curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
17. Extreme cautions should be exercised when using cooking or baking containers constructed of anything other than metal or ovenproof glass.
18. Be sure that nothing touches the top or bottom elements of the oven.
19. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
20. Do not store any materials other than manufacturer's recommended accessories in this oven when not in use.
21. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
22. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can still break around edges. Avoid scratching door surface or nicking edges.
23. This appliance is OFF when the Timer Control button is in the "OFF" position.
24. Do not use outdoors.
25. Do not use appliance for other than intended use.
26. This appliance is not intended for use by persons (including children) whose physical, sensory or mental capabilities or lack of experience and knowledge, prevents them from using the appliance safely without supervision or instruction.
27. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
28. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments
  - farm houses
  - by clients in hotels, motels and other residential type environments
  - bed and breakfast type environment


# SAVE THESE INSTRUCTIONS

## For Household Use Only

### Getting To Know Your Oven

## MAIN COMPONENT

Illustrations may differ from actual product.

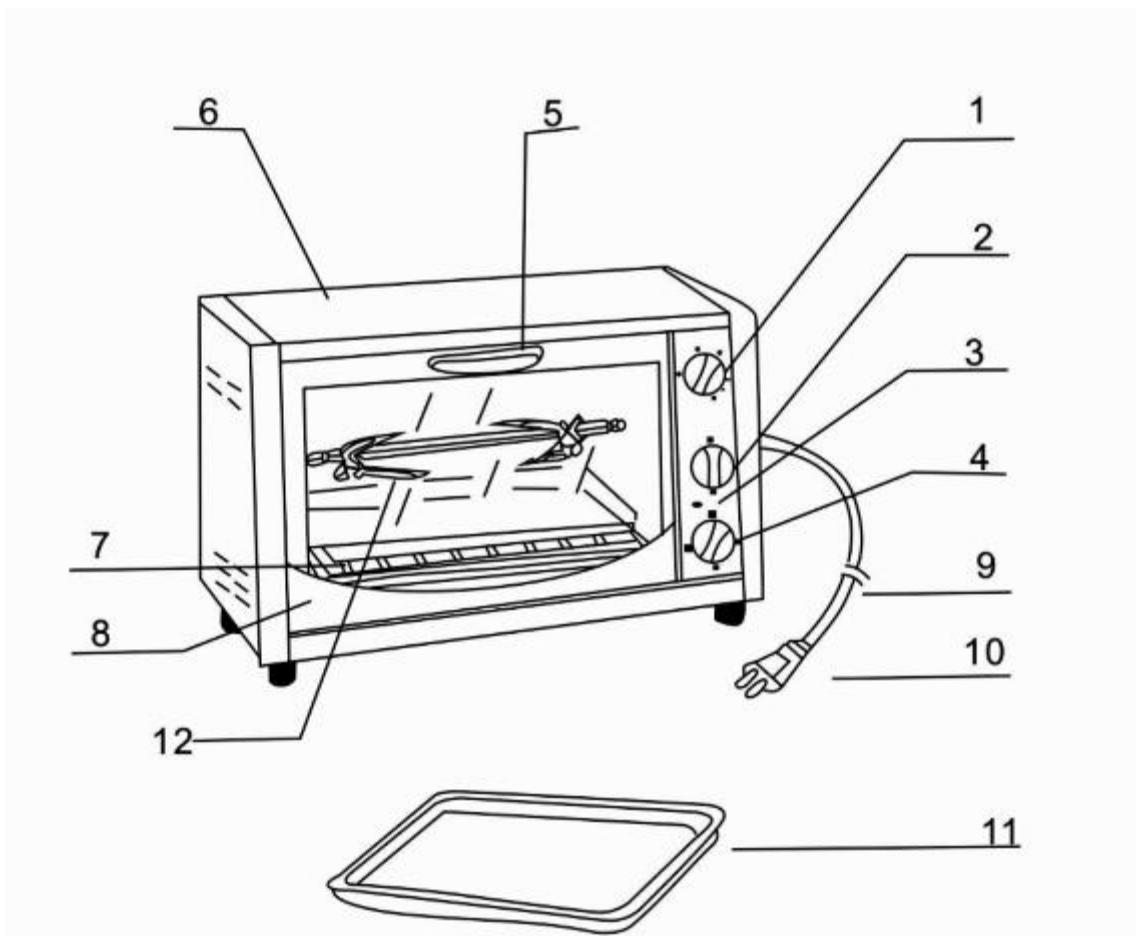

- 1: Temperature Control Knob
- 2: Heating selector knob
- 3: Indicator light
- 4: Timer knob
- 5: Handle
- 6: Housing

- 7: Wire Rack
- 8: Door trim
- 9: Power cord
- 10: Plug
- 11: Bake tray
- 12: Rotisserie fork

# Technical Specifications

**Voltage: 230V a.c. 60Hz.**

**Power: 2000 Watts.**

## Before using your Oven

▲ Before using your Oven for the first time, be sure to:

1. Read all of the instructions included in this manual.
2. Make sure that the Oven is unplugged and the Time control is in the “OFF” position.
3. Wash all the accessories in hot, soapy water or in the dishwasher.
4. Thoroughly dry all accessories and re-assemble in Oven, plug Oven into outlet and you are ready to use your new toaster Oven.
5. After re-assembling your Oven, we recommend that you run it at the highest temperature (230°C) on the toast function for approximately 15 minutes to eliminate any packing residue that may remain after shipping. This will also remove all traces of odor initially present.

### Please Note:

Initial start-up operation may result in minimal smell and smoke (about 15 minutes). This is normal and harmless. It is due to burning of the protective substance applied to the heating elements in the factory.

## Using your Convection oven, Rotisserie and Toaster

### **Positioning of the Wire Racks**

Cookies – Use bottom and middle Support Guides.

Layer Cakes – Use bottom Support Guide only (bake one at a time).

Pies – Use bottom and middle Support Guides.

### **CAUTION:**

Always use extreme care when removing bake tray, wire rack or any hot container from a hot Oven. Always use the rack handle, or an oven mitt when removing hot items from the Oven.

# Care & Cleaning

**Warning: Be sure to unplug the oven and allow it to cool before cleaning.**

Any spattering that occurs while cooking and comes into contact with the continuous coating is oxidized while the oven is in operation. If desired, wipe the walls with a damp sponge, cloth or nylon scouring pad and mild detergent. **DO NOT USE STEEL WOOL SCOURING PADS, ABRASIVE CLEANERS OR SCRAPE THE WALLS WITH A METAL UTENSIL, AS ALL OF THESE METHODS MAY DAMAGE THE CONTINUOUS CLEAN COATING.**

All accessories should be washed in hot soapy water or can be cleaned in a dishwasher. The door can be wiped with a damp sponge and wiped dry with a paper or cloth towel. Clean the outside with a damp sponge. **DO NOT USE AN ABRASIVE CLEANER AS IT MAY DAMAGE THE EXTERIOR FINISH.**

**DO NOT USE AN ABRASIVE CLEANER OR STEEL WOOL SCOURING PAD ON THE DRIP PAN AS IT MAY DAMAGE THE PORCELAIN ENAMEL FINISH.**

**LET ALL PARTS AND SURFACES DRY THOROUGHLY PRIOR TO PLUGGING Air Fryer Oven IN AND USING.**

*“Honor your father and mother so that you may live long  
in the land the lord your god is giving you”*  
**Exodus 20:12**

**Cherenz Global Mfg. Inc., distributor of Tough Mama Home and Kitchen Appliances, shall not be responsible for any fire, scalding or injury from misuse or negligence from the use thereof.**